



Makes Your Life Easier!®

Maxi-Lok®

MULTI-SURFACE PUSH BROOM

Use & Care

Shake or rinse broom after each use to remove excess debris. For best results, hang to store. Keep broom fiber away from wall and off the floor.



Check out our complete line of cleaning products at cedar.com



Outdoor Power Angler®



XL Cotton Deck Mop



Squeegee